

LAYERED PYRAMID OUTDOOR WATER FOUNTAIN AND LED LIGHT

GP-6921

Read the assembly instructions carefully and follow the care instructions. Save these instructions for future reference.

Select a smooth, level surface to place the fountain.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.



Inspect packaging to ensure all parts are accounted for before disposing of packing materials.




2-PERSON
ASSEMBLY
RECOMMENDED

No.	PARTS	QTY.
A	Pyramid Topper	1
B	Finger Light	1
C	Electric Submersible Pump	1
D	Basin	1
E	Pedestal Top	1
F	Pedestal Bottom	1
G	Decorative Stones	1 PK

NOTE: The water tubing is built into the pyramid topper. Take care when handling the water tube; detaching the water tube from the fountain topper will damage the fountain and void the product warranty.

ASSEMBLY

- Place Pedestal Top (E) onto Pedestal Bottom (F).
- Gently set Basin (D) onto the pedestal.
- Run Pump (C) power cord down the center of the basin, through the pedestal and under the groove in the back of the pedestal.
- Connect Finger Light (B) to the short cable on the pump.
- Insert the light into the underside of Pyramid Topper (A).
- Connect Pump (C) to the water tube in Pyramid Topper (A) and gently place the topper onto the basin.
- Rinse Decorative Stones (G) with clean water and gently place them inside the basin.
- Fill the fountain with enough water to keep the pump fully submerged during operation.
- Firmly connect the AC Adapter to the pump power cord and plug it into a properly grounded GFCI outlet.

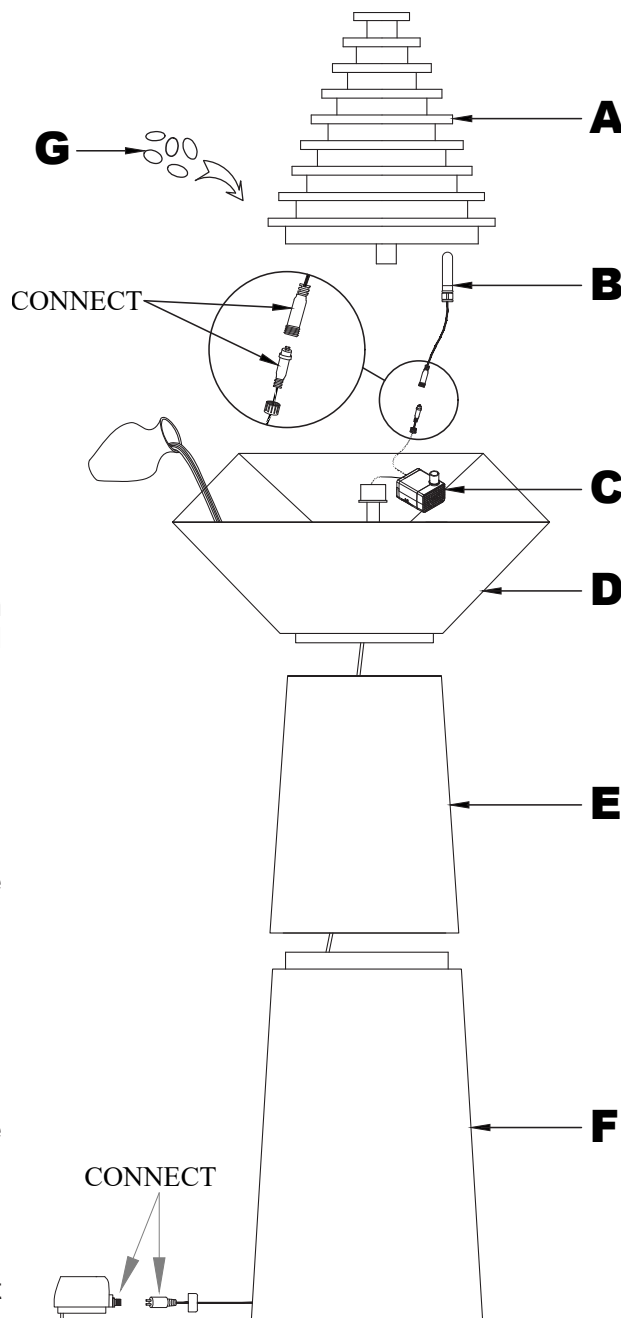

Note: When first plugged in, there may be air in the pump. It may take several moments for trapped air to escape, allowing water to flow.

Care & Maintenance

- Some splashing may occur; adjust the flow rate on the pump if the water rate is too low or too high.
- Some climates and weather conditions increase water evaporation, requiring water to be added more frequently. Frequently check water levels during times of high temperatures, wind, and long-term exposure to direct sunlight to ensure the pump remains underwater. Never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required. Tap water is okay to use, but avoid heavily chlorinated water as it may damage the fountain finish and the pump.
- Over time, the finish may gradually mellow in color due to sun exposure; this is part of the natural aging process and is not cause for return.
- Periodically change the water to help keep the fountain and pump clean. Remove scale and buildup regularly.
- Do not use chemicals, abrasives, or pressure washers to clean the fountain.
- Always unplug the power supply before cleaning and maintaining the fountain and the circulating pump. Take care when handling the pump; only pick it up by the body of the pump, never the power cord.
- In freezing weather, drain the fountain, disconnect the pump, and store indoors to prevent damages.

WARNING: THE ONE-YEAR WARRANTY DOES NOT COVER DAMAGES OR DEFECTS CAUSED BY THE APPLICATION OF CHEMICAL TREATMENTS, PROTECTIVE COATINGS, TOUCH-UP PAINT, OR CLEANING PRODUCTS.

Troubleshooting


- If water is not flowing within several moments of the fountain being plugged in, ensure that the pump is fully submerged underwater. Add water to the reservoir if necessary. The pump may have air bubbles trapped inside, which can prevent water from circulating properly. Unplug the power supply for a few moments and plug it back in.
- Check the flow control on the body of the pump, it may need to be adjusted to achieve the desired water flow rate.
- Inspect the pump and tubing for obstructions.
- Pump noise can be caused by trapped air, low water level, or the pump being too close to the walls of the fountain. While the pump is fully submerged, try gently tapping the pump with your finger to help release the trapped air. Also, check if adding water or moving the pump helps to reduce noise.
- Check to make sure the power outlet is working; consult a certified electrician if in doubt about electrical connections.



IMPORTANT SAFETY INFORMATION



- Fountains may splash or leak; always protect surfaces that can be damaged by water. Do not use fountain in areas that can be damaged if water splashes or leaks.
- Prevent water loss or damage to electrical sockets by ensuring the power cord has a drip loop; a diagram of a drip loop is shown on the right.
- Keep fountain out of reach of children and pets.
- Make sure the power cord is away from traffic areas.
- Keep power cord away from all heat sources. Do not use electrical cords in areas with high temperatures.

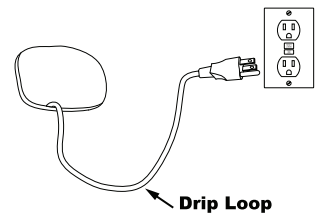

Drawing is for visual reference only, power cord access and adapter vary by fountain.

Any modification to the product or failure to follow recommended care will void the product warranty.

If you experience issues with assembly or the product was damaged during transit, please contact our customer service team through one of the methods mentioned at the top of page 1. Please have the item number and order information ready to expedite response time.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.