


5-STEP ROCK FALLS INDOOR TABLETOP FOUNTAIN WITH LED LIGHTS DW-34112

Review all assembly and care information before using this product. Save this manual for future reference.

Select a smooth, level surface to place the fountain. Assemble components on a soft, clean surface to avoid scratching or damaging the finish.

NOTE: The water tubing is built into the fountain body. Take care when handling the water tube; detaching the water tube from the fountain body may damage the fountain and will void the product warranty.

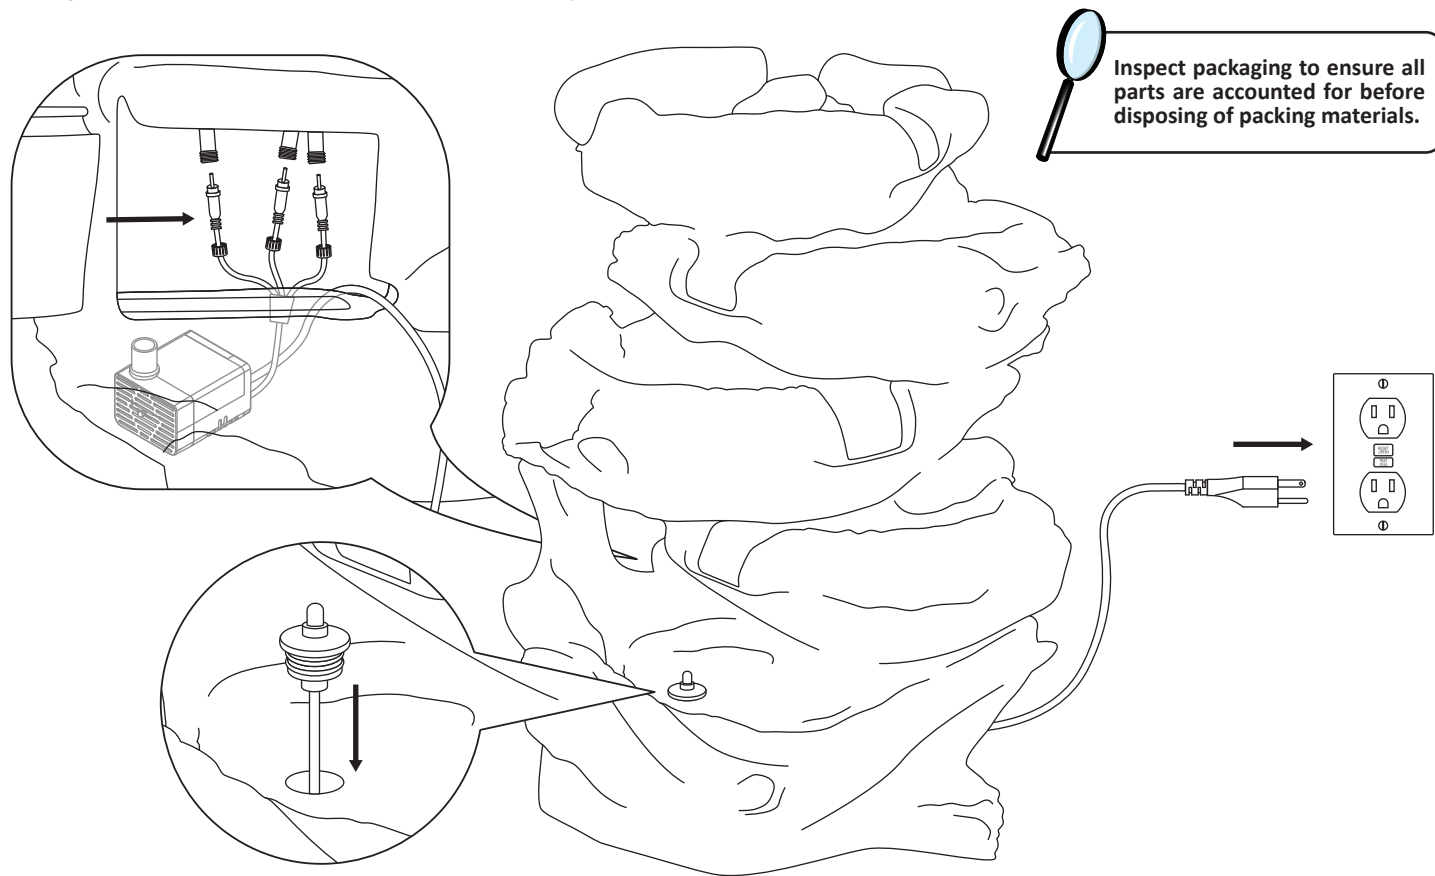

ASSEMBLY

1. From the access panel in the back of the fountain, locate the pump power cord and pull it out of the reservoir.
2. Place light into the stopper until bulb is visible, push the light cable down through the hole, then place the stopper into the hole until snug.
3. Firmly connect the light cables to the splitters and the pump.
4. Check that the pump is firmly connected to the water tubing that is built into the fountain, and the pump is sitting flat on the bottom of the reservoir.
5. Slide the pump access panel door onto the back of the fountain.
6. Fill the fountain with enough water to keep the pump fully submerged during operation.
7. Plug the power cord into a properly grounded GFCI outlet.

NOTE: When first plugged in, there may be air trapped in the pump. It may take several moments for trapped air to escape, allowing water to flow.

Care & Maintenance

- For indoor use only.
- Check the water level frequently to ensure the pump remains fully submerged; never allow the pump to run dry as it will burn out the motor.
- Only use water in this fountain. Distilled water will help prevent mineral buildup but is not required. Avoid heavily chlorinated water as it may damage the fountain and pump.
- Periodically change the water to reduce scale and buildup — clean components regularly for optimal performance and appearance. DO NOT use abrasive materials and harmful additives such as bleach or chlorine to clean the fountain or pump.
- Always unplug the fountain before cleaning and/or maintaining the fountain and the recirculating pump.
- Take care when handling the pump; only pick it up by the body of the pump, never by the power cord.

Troubleshooting

- If water is not flowing within several moments of the fountain being plugged in, ensure that the pump is fully submerged underwater. Add water to the reservoir if necessary. The pump may have air bubbles in the filter, which can prevent water from circulating properly and can also cause excess pump noise. Unplug the power supply for a few moments and plug it back in.
- Check the flow control on the body of the pump, it may need to be adjusted to achieve the desired water flow rate.
- Inspect the pump and tubing for obstructions.
- Pump noise can be caused by trapped air, low water level, or the pump being too close to the walls of the fountain. While the pump is fully submerged, try gently tapping the pump with your finger to help release the trapped air. Also, check if adding water or moving the pump helps to reduce noise.
- Make sure the AC adapter is fully connected to the pump power cable. If the light is not working, ensure the cable is fully connected, and the seal is adequately tightened (do not over-tighten).
- Make sure the power outlet is working; consult a certified electrician if in doubt about electrical connections.

If you experience issues with assembly, pump operation, or the product was damaged during shipping, please contact our customer service team through one of the methods mentioned at the top of page 1.


Please have the item number and order information ready to expedite response time.



IMPORTANT SAFETY INFORMATION



- Keep fountain out of reach of children and pets.
- Fountains may splash or leak; always protect surfaces that can be damaged by water.
- Prevent water loss or damage to electrical sockets by ensuring the power cord has a drip loop; a diagram of a drip loop is shown on the right.
- Make sure the power cord is away from traffic areas.
- Keep power cord away from all heat sources. Do not use electrical cords in areas with high temperatures.

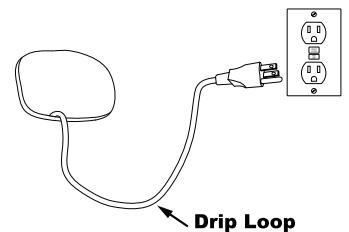

*Drawing is for visual reference only,
cord placement and plug type
vary by fountain style.*

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.